

IG326

User manual



1. Introduction

On the following pages you will learn how to install and operate the device in an appropriate way. We attach great importance to the safe, appropriate and effective handling of this device. It is therefore important to read this manual thoroughly before using the device.

In the manual you will find important instructions helping you to avoid danger and to prolong the reliability and durability of the device and the accessories.



For further information refer to www.swarco.com/sts
Subject to technical modifications.

1 © 2013 All rights reserved

For your own safety you should read the safety instructions. Follow the instructions closely in order to avoid danger for yourself and others or damage to the device.

If you have any questions about the IG326, which are not answered in this manual, or if you have problems understanding the descriptions, please contact:

SWARCO TRAFFIC SYSTEMS GMBH
Business Unit Detection
Niederkircher Straße 16, D-54294 Trier
detection@swarco.de

© 2013 All rights reserved

1.1 Usage according to regulations

The IG326 is solely suited for the detection of vehicles. Any further usage is not appropriate. Do not use the IG326 for any other purpose.

1.2 Label

The IG326 is provided with a quality label / serial number. You will need these indications when talking with the customer service, e.g. ordering accessories or spare parts.

Note here the serial number and name of the device in order to have them available when needed:

Serial number:

Voltage version:

CE-label:

2

1.3 Further documentation

Loop installation Manual

1.4 Symbols

In several places throughout this manual you will find the following symbols stating important safety instructions:

ATTENTION! This symbol indicates dangers which might cause damage to people or property.

NOTE This symbol indicates information for installation and function of the device.

1.5 Safety instructions

Read the following safety instructions thoroughly and observe them carefully. They are stated to ensure your own safety and the safety of others and to avoid damage to the device or accessories.

ATTENTION!

Danger of electricity! Make sure that no liquid may get inside the device. If this happens, interrupt the power supply to the device at once.

If you notice any damage, e.g. broken or crushed cables, damaged plugs, enclosures etc., turn off the device at once, interrupt the power supply and make sure that the device cannot accidentally be turned on again.

The device may only be installed, brought into service and repaired by an electro-technical expert. Inappropriate operation, improper maintenance or not observing the instructions in this manual can lead to danger.

3

Any malfunction of the device which may limit the safety of its users or others must be removed immediately. All warning and safety labels on the device must be observed and kept complete and legible.

The appropriate usage must be observed by all means. For damage resulting from inappropriate usage the manufacturer will not undertake any liability.

The device must not be used as a safety component in the sense of the European Directive 2006/42/EC ("Machinery Directive"). In systems with high risk additional safety measures are necessary. The operator of the device must ensure that the chosen means of operation will not cause damage to material or danger to people and that all security and safety installations are present and functioning.

Before installation and first operation please observe the instructions in the manual.

The manual must be available at the site of usage at any time. It must be read thoroughly and applied appropriately by the person responsible for the operation, maintenance and service of the device.

NOTE

Our products are in a constant process of improvement and advancement. Because of this, read the current manual thoroughly before installation and first operation.

Without prior consent of the manufacturer, no modifications, neither mechanical nor electrical, may be done. Only parts that have the consent of the manufacturer may be used for backfitting or as accessories. Any violations will lead to the termination of conformity and the manufacturer's warranty. The user will subsequently bear the risk.

4

2 Product description

2.1 Features

The induction impulse transmitters IG326 evaluate the loops in the ground. Those depict the inductivity of a high-frequency oscillator circuit. If a vehicle crosses the loop, its metal components cause a change of frequency in the oscillator circuit. These are analyzed by the loop detector, transmitted as switching signals via potential free relay contacts and displayed on the front LEDs. The analysis of the loop frequency is done via a micro-processor system which aligns automatically to the according loop and compensates changes of the loop inductivity caused by temperature, humidity or aging of components. The 2-channel induction impulse transmitter IG326 analyses two loops (Loop1, Loop2) in multiplex process. Since only one loop at a time is active, interference is avoided even when loops are interlaced.

2.2 Switching outputs

The switching outputs are coupled with the LED display (Channel1: (DET); Channel2: (DET)) on the front panel. For each channel there is one switching output available, for which the status "loop occupied" can be switched (for channel1: Relay Channel1 – for channel2: Relay Channel2). All channels (switching outputs) are equipped with electro-mechanical relays.

2.3 Switching special version ST (Fault report)

The special model ST has third switching output for collective fault reports (Fault report), which is activated when at least one channel is faulty. The third switching output is an electronic semiconductor relay.


5

2.4 Technical data

Supply voltage	230 VAC: (-10 - +6) % < 4.5 VA 115 VAC: (-10 - +6) % < 4.5 VA 24 VAC: +/-10 % < 3.0 VA 24 VDC: +/-10 % < 3.0 W
Operating temperature	-25°C to +70°C
Storage temperature	-40°C to +80°C
Protection class	IP30 (version with service interface and without service interface cover: IP 20)
Enclosure (plastic)	L = 75 mm, W = 37 mm, H = 68 mm
Connection	via 11-pin connector (type 78-S 11); dimension of socket manufacturer-dependent
Weight	160g-260 g
Inductivity range	20 µH to 2000 µH recommended range: 100 µH to 300 µH
Loop resistance	max. 30 Ω
Measurement time per channel	min. 5ms – max. 25ms
Cycle time	Measurement time channel 1 + measurement time channel 2
Frequency range	2 levels (LOW or HIGH)
Work frequency	20 kHz – 70 kHz
Alignment	automatically after switch-on of power supply, after pushing reset switch or parameter changes
Switching output	floating relay contacts: 230V AC $U_{max} = 250 V$ $I_{max} = 5 A$ 24V AC/DC $U_{max} = 42 V$ $I_{max} = 5 A$
Displays	LED red (ERR) = loop failure LED green (DET) = detection LED yellow (PWD) = power
Safety circuit loop input	galvanic separation by transmitter, glow lamp


6

2.5 Dimensions (in mm)

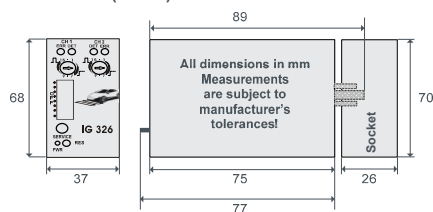

2.6 Pin connection

Standard model IG326W

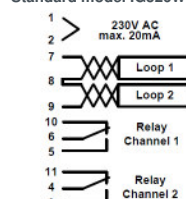

Contact position:
Detector on, loop not occupied
DIP-switch (G) S7= OFF active

Power supply and pin connections indicated on left label of device.

For special models, please note the pin connections on the side label

The pins 1 & 2 are used in both versions (230V AC and 24V AC/DC) for connecting the power supply. The 24V DC version has an reverse polarity protection..

7

Because of the above-mentioned pin compatibility make sure that under no circumstances the 24V version is plugged on a socket with 230V AC power supply and vice versa!
In variants with 230V AC power supply the relays may only be connected to voltages outside of the SELV voltage range and must not exceed 250VAC!
Only loops with the following additional insulation may be connected:
a) Insulation $\geq 0.4mm$ b) dielectric strength $\geq 1.5kV$

2.7 Switching outputs


With the 24V detector versions, the relays may only be connected to voltages within the range of maximally 60V peak voltage and maximally 42 V_{eff}!

115/230V AC Power supply		24V AC/DC Power supply	
(IG326W230, IG326S230, IG326ST230) (IG326W115, IG326S115, IG326ST115)		(IG326W24, IG326S24, IG326ST24) (IG326W24S, IG326S24S, IG326ST24S)	
Relay channel 1	electr. relay Fault report (only IG326ST230)	Relay channel 1	electr. relay Fault report (only IG326ST24)
Relay channel 2	(only IG326ST115)	Relay channel 2	(only IG326ST24)
$U_{max} = 250V AC$ $I_{max} = I_{eff} = 5 A$	$U_{max} = 250V AC$ $I_{max} = I_{eff} = 100 mA$ $P_T = 250 mW$ $R_{On} < 30 \Omega$	$U_{max} = 42V AC/DC$ $I_{max} = I_{eff} = 5 A$ $P_T = 250 mW$ $R_{On} < 5.0 \Omega$	$U_{max} = 42V AC/DC$ $I_{max} = I_{eff} = 200 mA$
potential free	potential free	potential free	potential free

8


Switching mode
(e.g. Relay Channel 1, standard model IG326W)

 Detector off:



The switching modes for the special versions IG326S, IG326ST only apply to the contacts 5 and 6

 DIP-switch 7 (DIP) S7 = OFF
(open-circuit-principle):



DIP-switch 7 (DIP) S7 = ON
(closed-circuit-principle):



3 Installation of the IG326

Before switching on the power supply, the device must be plugged onto the socket. For the use of the device in a surrounding with higher protection requirements, SWARCO TRAFFIC SYSTEMS offers special enclosures (type GHIG301).

3.1 Special notes on the loop

The safe functioning of the device depends essentially on the technically proper installation and laying of the loops, since the loops are the sensors of the device. The loop feed cable must be drilled approx. 20 – 50 times per meter and must be laid in distance from live wires. For further information see Loop installation Manual (available at www.swarco.com/sts).

9

The device has a power consumption of approximately 3 VA. Because of the enclosure (IP30) creates a self-heating. This is normal, but please note the following instructions.

When it is installed in an enclosure or cabinet please ensure a adequate heat dissipation. The ambient temperature surrounding the unit and the temperature inside this enclosure or cabinet must not exceed the maximum allowable operating temperature of 70 °C.

Via DIP-switches (DIP) and rotary switch (D1 for channel 1, D2 for channel 2) all parameters can be easily adjusted.

After every device adjustment a new alignment will occur automatically.

The reset button (RES) must only be pressed after changing the frequency (DIP-switch 1 off/on).

The service interface (SERVICE) is available in the special version. Please see chapter 6.1 service interface.

The diagram shows the control panel of the IG 326. It features two rotary switches labeled D1 and D2, each with a 'LOCK' indicator. Below them are two DIP switches labeled DIP1 and DIP2. To the right of the DIP switches is a vertical slider control labeled 'TUNING' with 'UP' and 'DOWN' arrows. At the bottom are three buttons: 'SERVICE', 'RES', and 'FREQ'. The model number 'IG 326' is printed on the right side of the panel.

The switching state "loop occupied" is signaled by the glowing green channel LED (DET) and a fault by the red channel LED (ERR). In addition, a detector fault, e.g. "loop short circuited", by cyclic flashing of the green channel LED (DET). For each error, a defined number of flashes is given, which appears repeatedly every 5 seconds.

Blinking code Channel LED (DET)	Channel faults
1	Loop short circuited
2	Loop interrupted
3	Frequency not adjustable
4	Disturbance
6	Error of other channel of directional logic
7	Maximum period for loop alignment exceeded

Type: IG326W230 IG326W115 IG326W24
IG326S230 IG326S115 IG326S24
IG326ST230 IG326ST115 IG326ST24

Position	Function	
 Static hold time	1	Sensitivity minimal 0.3*
	2	Sensitivity 0.17*
	3	Sensitivity 0.1*
	4	Sensitivity 0.035*
		Default setting
	5	Sensitivity 0.02*
	6	Sensitivity 0.012*
	7	Sensitivity maximal 0.007*

 Pulse mode	9	Sensitivity minimal	0.3*
	10	Sensitivity	0.17*
	11	Sensitivity	0.1*
	12	Sensitivity	0.035*
	13	Sensitivity	0.02*
	14	Sensitivity	0.012*
	15	Sensitivity maximal	0.007*

13

Description	Possible cause	Correction
Detector does not align, yellow LED (PWR) off	There is no power supply for detector	Check connection to power supply
Red LED (ERR) on, green LED (DET) blinking cyclically 2x long	Detector detects "loop interrupted"	Check loop and loop connection
Red LED (ERR) on, green LED (DET) blinking 1x long	Detector detects "loop short-circuited"	Check loop and loop connection
Green LED (DET) permanently on	"Test mode relay" relay tightened is active, switch (D1)-8	Deactivate „Test mode relay“ (see "Adjustment of sensitivity and hold time")
Yellow LED (PWR) blinking at 5 Hz after alignment / reset	Vehicle motion on the loop	During alignment phase there mustn't be any vehicles on the loop
	Loop is moved mechanically	Control laying of loop, observe documentation Loop installation Manual
Detector does not switch in spite of effected alignment	„Channel off“ switch (D1)-0 or "Test mode relay" switch (D1)-8	Activate channel (see "Adjustment of sensitivity and hold time")
	Selected sensitivity is too low	Progressively increase sensitivity until vehicles are detected correctly

Switch 1 Frequency	Adjustment of frequency This setting is used to avoid signal interference from other loops. Two or more detectors may not operate on the same frequency: OFF = Freq. HIGH ON = Freq. LOW
Switch 2 ON BOOST - Sensitivity boost	Boost – Sensitivity boost ON The “Boost” function causes an automatic increase of sensitivity limited to the maximum sensitivity. Thus, e.g., poles of trailers can be reliably detected. After the vehicle has left the loop, the sensitivity returns to the value originally set. In pulse mode, this function is disabled.
Switch 3 ON Switch on delay	Switch on delay ON The switching signal is emitted when the loop is attenuated for more than one second.
Switch 4 ON Switch off delay	Switch off delay ON The switching signal is switched-off with a delay of 2 seconds after the loop is vacant (not in pulse mode).
Switch 5 ON Pulse on exit	Pulse on exit ON The detector switches the channel relay only after the loop is vacant. The setting is only active if additionally the channel adjustments are set to pulse mode (switches D1 D2).
Switch 6 ON Detection by fault	Detection by fault ON A loop fault is indicated on the LEDs (ERR), additionally the according channel relay is switched.
Switch 7 Relay mode	Relay Mode OFF = open-circuit-principle ON = closed-circuit-principle

Type: IG326W24S
IG326S24S
IG326ST24S

 If the rotary switches (D1, D2) are on position 0, the parameterizing is solely done via service interface. The settings of the rotary switches (D1, D2) & the DIP-switch (DIP) on the front panel are disabled. If only one rotary switch (D1 or D2) is on position 0, this channel is deactivated and the service interface is not active.

17

Symbol	Function
	Pulse: The channel relay is switched on only a pulse, regardless of the acquisition time of the vehicle. Pulse length 100 ms (optional up to 1s)
	Static: The channel relay is switched on permanent („static“), i.e. as long as the vehicle is detected in the detection range
Position	Function
	Off/Software (Switch off / Service interface active) This switch position turns off the channel function If the device offers a service interface, software adjustments can be activated by turning off the channels (switches “D1” and “D2” in position “0”). For more information see also software manual.
	Relay test mode This switch position allows it to check the devices/ controller connected to the detector: As long as the switches (D1 & D2) are set on this switch position, the two relay contacts are alternately turned on and off by pushing the reset button (RES). Start position: relay channel 1 and relay channel 2 not active => keystroke (RES): only relay channel 1 active => keystroke (RES): only relay channel 2 active => keystroke (RES): both relays active => keystroke (RES): => Start position

Directional logic	The attenuation of the first loop is registered in the detector but no relay is switched yet. Only if the second loop is attenuated at the same time, the relay of the channel which was attenuated the last is switched and stays switched until the second loop is clear again. This function is valid for both directions. “Switch on delay” is not allowed while using “directional logic”
-------------------	---

Alignment: short keystroke (< 2 sec),
all active loop-channels are initialized
Reset: long keystroke (> 2 sec),
Detector reset, afterwards initialization of all channels

When switching the power supply, when there are voltage interruptions or when the reset switch (RES) is pushed, the loop detector automatically aligns itself to the connected loops and switches the relays to switching position "loop not attenuated". During the alignment period the yellow power-LED (PWR) is blinking with a frequency of 5 Hz and glows permanently after the alignment is finished. This alignment period usually takes < 2 seconds.

15

EG-Konformitätserklärung

EC-Declaration of Conformity

Hersteller / manufacturer: Swarco Traffic Systems GmbH

Adresse / address: Niederkircher Str. 16
54294 Trier

erklärt, dass das Produkt / declares that the product:

Typ / type: Induktiver Schienen-detektor / Inductive loop transmitter

Modell / model: IG31W24 IG32BW24 IG31BW20 IG32BW20

Verwendungszweck / intended use: Fahrzeug-Zugangskontrolle / vehicle access control

bei bestimmungsgemäßer Verwendung den grundlegenden Anforderungen gemäß Artikel 3 der RÄTTE-Richtlinie 1999/5/EG entspricht und dass die folgenden Normen angewandt wurden:

the essential requirements of Article 3 of the RÄTTE 1999/5/EC Directive, if used for its intended use and that the following standards have been applied:

1 **Sicherheit / Gesundheit (Artikel 3.1.a der RÄTTE-Richtlinie)**
safety (Article 3.1.a of the RÄTTE Directive)

Angewandte Norm(en) / IED 80950-1 2006 (2nd Edition)/A1:2009
Applied standard(s) EN 80950-1 2006/A1:2009/A1:2010

2 **Elektromagnetische Verträglichkeit (Artikel 3.1.b der RÄTTE-Richtlinie)**
electromagnetic compatibility (Article 3.1.b of the RÄTTE Directive)

Angewandte Norm(en) / ETSI EN 301 489-1 V1.8.1
Applied standard(s) ETSI EN 301 489-3 V1.4.1

3 **Effiziente Nutzung des Funkfrequenzspektrums (Artikel 3.2 der RÄTTE-Richtlinie)**
efficient use of the radio frequency spectrum (Article 3.2 of the RÄTTE Directive)

Angewandte Norm(en) / ETSI EN 300 335-1 V1.7.1
Applied standard(s) ETSI EN 300 335-2 V1.5.1

Träger: O.A.G. 201 L

(Stempel und Unterschrift des Herstellers)
(Stamp and signature of manufacturer)

[Signature]

(Stempel und Unterschrift des Bevollmächtigten)
(Stamp and signature of authorized person)

[Signature]

02/2008